


# CHD4178

## ASSEMBLY & INSTALLATION GUIDE

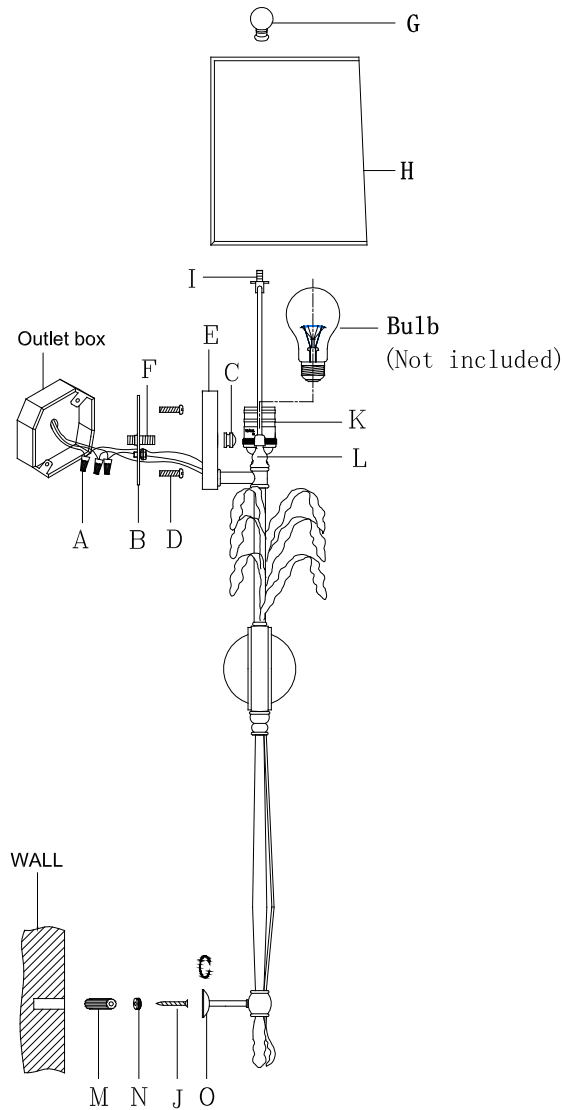

**WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.**

**WARNING \*\*\* SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

**INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.**

**ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.**

1. Carefully remove the crossbar (B) from the back plate (E) by removing the decorative finial (C).
2. Attach the ground wire from the fixture to the ground wire from the building using the provided wire nut (A).
3. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
4. Attach the common wire (ribbed, no words) from the fixture to the white wire from the building using the provided wire nut (A).
5. Attach the hot wire (smooth, with words) from the fixture to the black wire from the building with the provided wire nut (A). Secure each connection by tightening and then checking that no wires can be pulled out.
6. IT IS IMPERATIVE THAT YOU NOT MIX THESE WIRES OR SAFETY WILL BE COMPROMISED.
7. Carefully tuck the wires inside the outlet box.
8. Install the crossbar(B) to outlet box by using mounting screws (D) provided.
9. Secure the back plate (E) to the nipple (F) by using the decorative finial (C).
10. Drill 1 hole on the wall and make sure the hole distance will match to the fixture holes(O).
11. Knock the anchor (M) into the wall hole.
12. Let the screw (J) pass through the checking ring (N),and knock them into the anchor(M).
13. Secure the fixture (O) to the checking ring (N).
14. Insert bulb (not included) into socket.
15. Place lampshade (H) over the assembled harp (I) and secure with the finial (G)
16. Installation is complete.