


RL5460

ASSEMBLY & INSTALLATION GUIDE

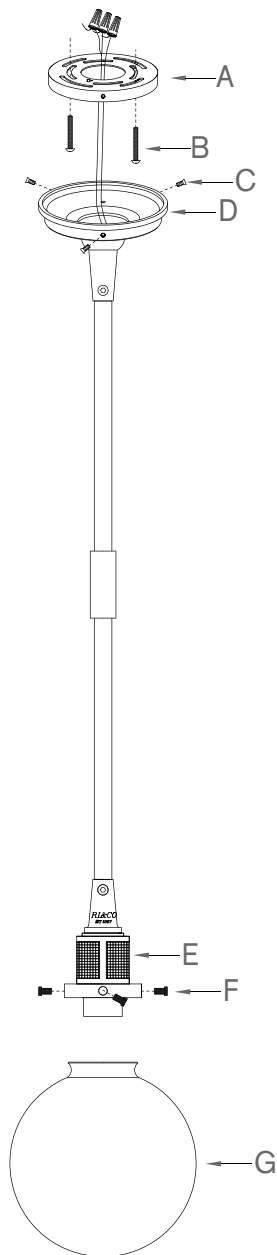

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

1. Carefully remove all parts from the carton.
2. Remove mounting plate (A) from base of light fixture (D) by removing base screws (C) in counter-clockwise direction.
3. Affix mounting plate (A) to ceiling outlet box with mounting screws (B) provided.
4. Connect ground wire from the light fixture (bare copper) to ground wire (green or copper in color), fasten together with a plastic wire connector. Tightly wrap the wire from ceiling outlet box with electrical tape, so the end of the connector is sealed. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
5. Connect the hot wires (smooth wires) from the light fixture to the hot junction box wire from ceiling outlet box (usually black). Fasten together with a plastic wire connector provided and tightly wrap wire connector with electrical tape.
6. Repeat the procedure with neutral wires (ribbed wire) from the light fixture to the wire from ceiling outlet box (usually white). DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.
7. Attach fixture base (D) to the affixed mounting plate (A) and tighten with base screws (C).
8. Insert light bulb (not included) Type A, maximum 75 watt into socket.
9. Loosen thumbscrews (F), insert glass shade (G) into shade holder (E) and secure by tightening thumbscrews (F). DO NOT OVERTIGHTEN OTHERWISE GLASS WILL BE DAMAGED.

*** Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.



RALPH LAUREN