ASSEMBLY INSTRUCTIONS

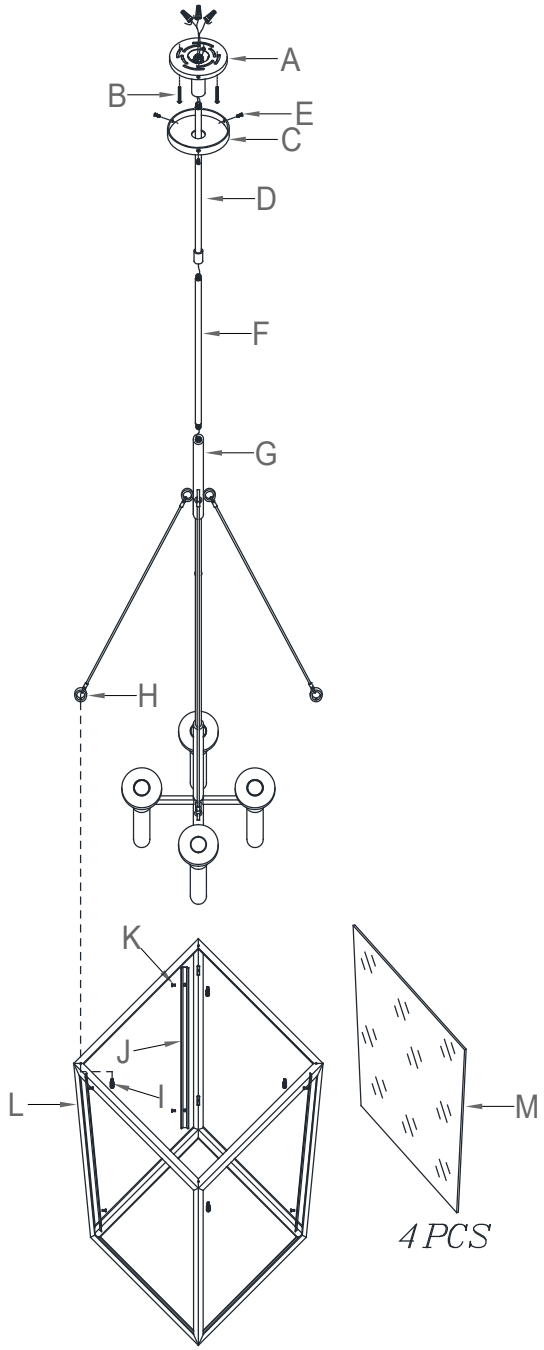

Cochere Medium Lantern
Item # BBL 5105

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING * SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

1. Carefully remove all parts from the carton.
2. To install glass panels (M) to each frame of lantern box (L), removing all bent metal tabs (J) by unscrewing set screws (K) and set aside. Insert a glass panel into one frame and insert the second glass panel to next frame, replace bent metal tabs (J) and follow with set screws (L) to secure glass panels (M) to the frame.
3. Remove screws (I) from hook rings (H).
4. Place the hook rings (H) onto top of lantern box (L) and secure by inserting screws (I).
5. Feed wires through pole (F), pole (D) and come out from the back side of mounting plate (A).
6. Screw the bottom nipple of lamp pole (F) into the top opening of light fixture (G).
7. Screw pole (D) onto the top nipple of lamp pole (F).
8. Screw the top nipple of lamp pole (D) into the bottom opening of mounting plate (A).
9. Unscrewing canopy screws (E) and slide canopy (C) on pole (D).
10. Attach the whole fixture with the mounting plate (A) to ceiling outlet box and secure with mounting screws (B).
11. Attach the bare copper ground wire from the fixture to the ground junction box wire (usually green or copper), fasten together with a plastic wire connector. Tighten wrap the wire connector with electrical tape. Be sure no wire strands are exposed. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
12. Connect neutral wire from fixture (ridged, molded wire) to the neutral wire from the junction box (usually white). Fasten both wires together with a plastic wire connector and tightly wrap with electrical tape. Be sure no wire strands are exposed.
13. Connect the hot wires from the fixture (smooth wire) to the hot wire (usually black) from the junction box. Fasten each together with a plastic wire connector and wrap the connection with electrical tape. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.
14. Tuck the wire connections neatly into the ceiling outlet box.
15. Slip canopy (C) to ceiling and secure with canopy screws (E).
16. Insert light bulbs (not included) into sockets.
17. Installation is complete. Restore power and test fixture.

*** Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.

Intertek DAMP

VISUAL COMFORT & CO. Est. 1987