

Revel Linear Wall (Compact Fluorescent)

700WSRVLL_-CF 1.0



WALL COLLECTION


GENERAL PRODUCT INFORMATION:



This product is suitable for damp locations.

This product can mount to either a 4" square electrical box with round plaster ring or an octagon electrical box.


NOTE: If mounting vertically, skip to section 3.

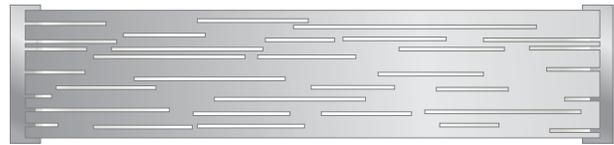


CAUTION—RISK OF FIRE
 This product requires installation by a qualified electrician. Before installing be sure to read all instructions and **DISCONNECT POWER TO THE ELECTRICAL BOX.**

Back Plate Installation (Horizontal)

NOTE: If plaster ring holes are horizontal or mounting onto a octagon electric box, skip to section 2.

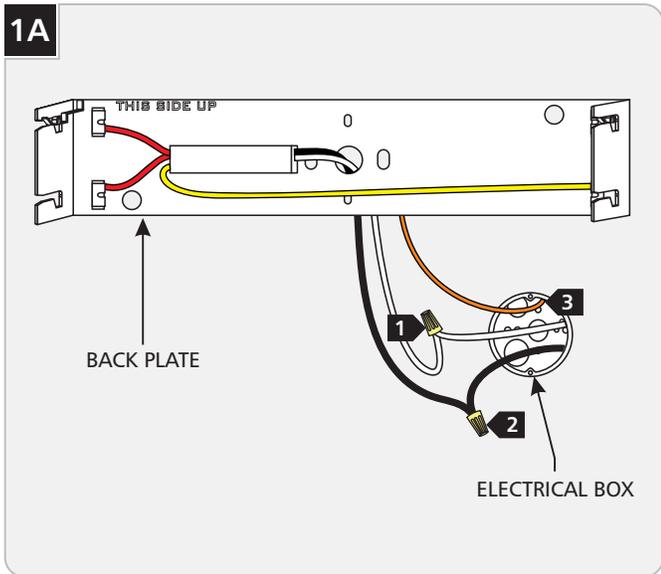


- 1** Connect the white fixture wire to the neutral power line wire with a wire nut.
- 2** Connect the black fixture wire to the hot power line wire with a wire nut.
- 3** Connect the fixture to a suitable ground in accordance local electrical codes.

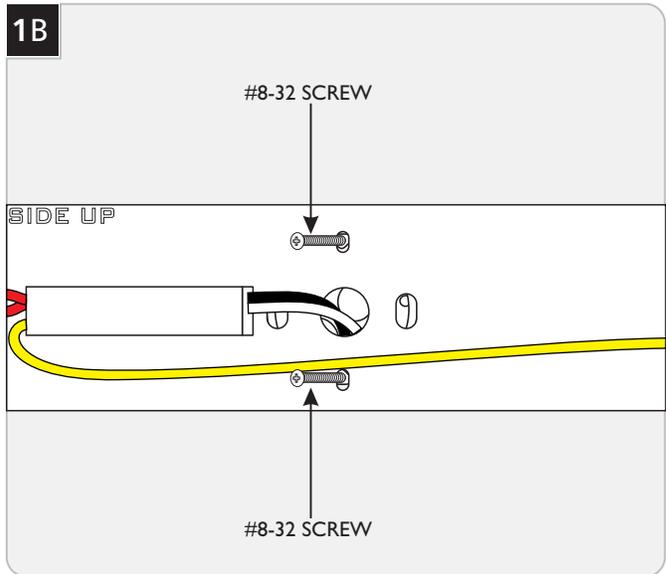


- 4** Properly place all wires and wire nut connections into the electrical box.
- 5** Level the mounting plate and secure it to the electrical box with the two #8-32 screws.

Skip to section 5


Back Plate Installation (Horizontal)

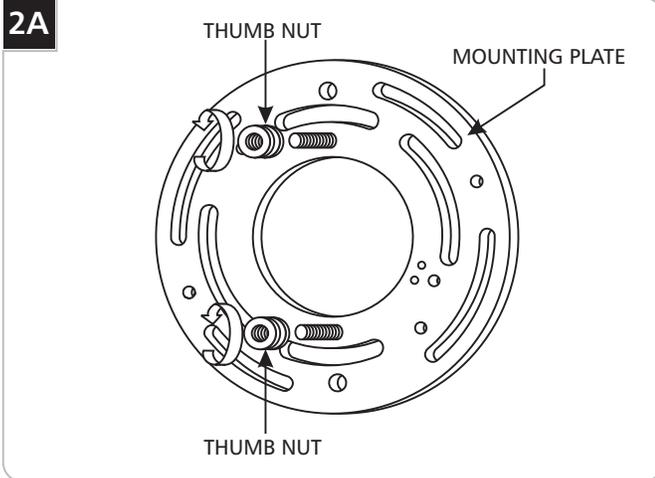


1 Unscrew and remove the two thumb nuts from the mounting plate.

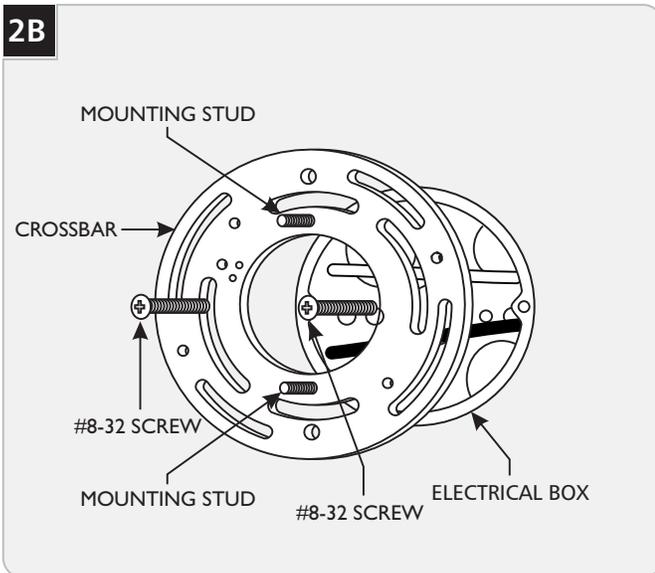

2 Align the two mounting studs vertically and mount the crossbar to the electrical box with the two #8-32 screws provided.

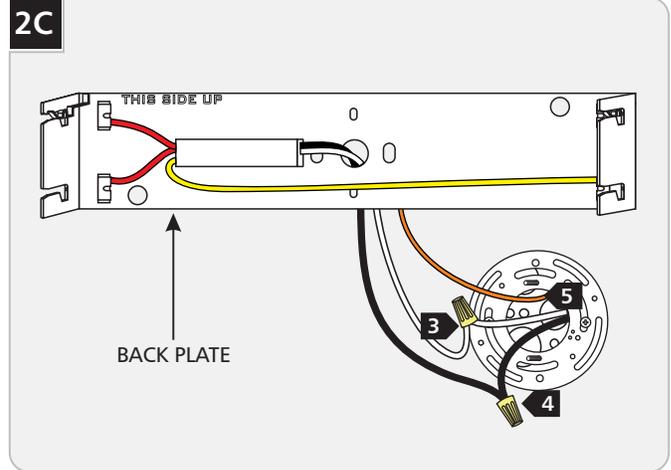

- 3** Connect the white fixture wire to the neutral power line wire with a wire nut.
- 4** Connect the black fixture wire to the hot power line wire with a wire nut.
- 5** Connect the fixture to a suitable ground in accordance local electrical codes.

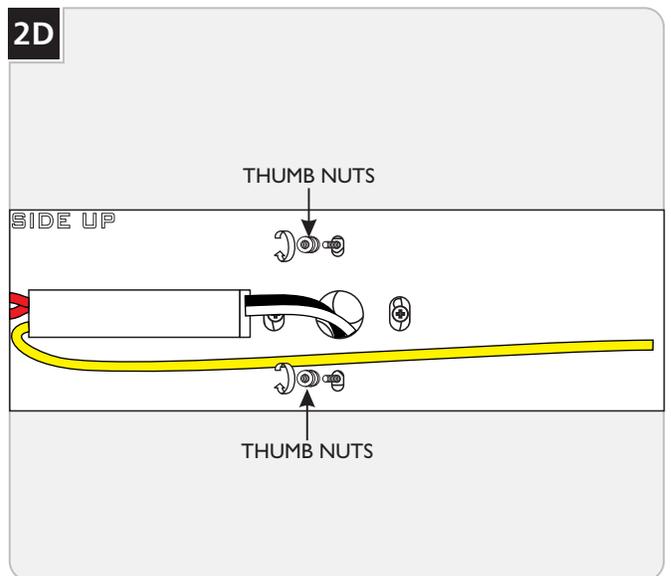


- 6** Properly place all wires and wire nut connections into the electrical box.
- 7** Place the back plate onto the mounting plate and secure it tightly by reinstalling the thumb nuts.

Skip to section 5

Back Plate Installation (Vertical)


NOTE: If plaster ring holes are vertical or mounting onto a octagon electric box, skip to section 4.

3A

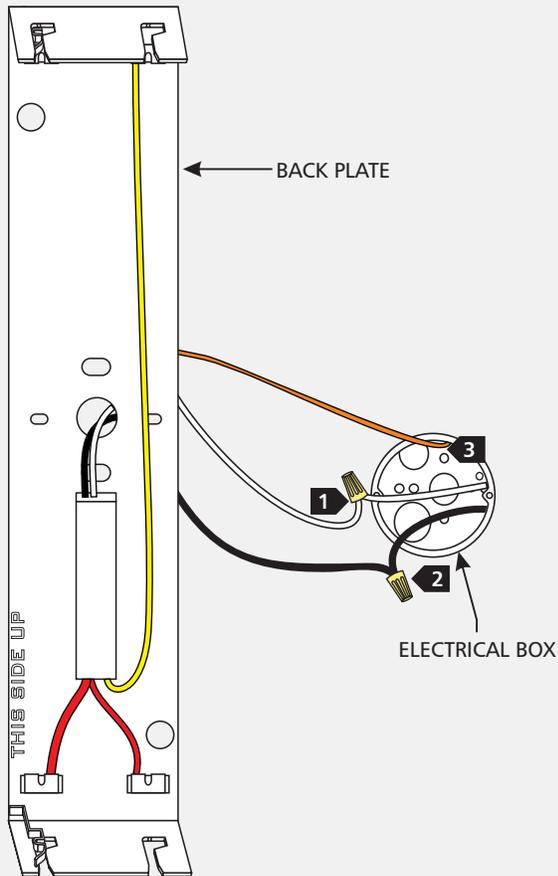

- 1** Connect the white fixture wire to the neutral power line wire with a wire nut.
- 2** Connect the black fixture wire to the hot power line wire with a wire nut.
- 3** Connect the fixture to a suitable ground in accordance local electrical codes.


3B

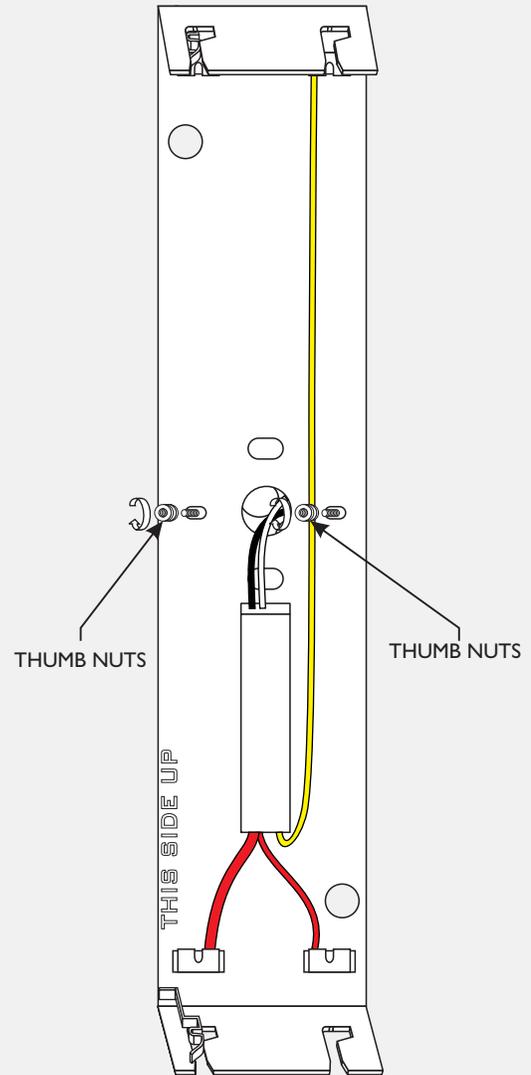


- 4** Properly place all wires and wire nut connections into the electrical box.
- 5** Level the mounting plate and secure it to the electrical box with the two #8-32 screws.

Skip to section 5


Back Plate Installation (Vertical)

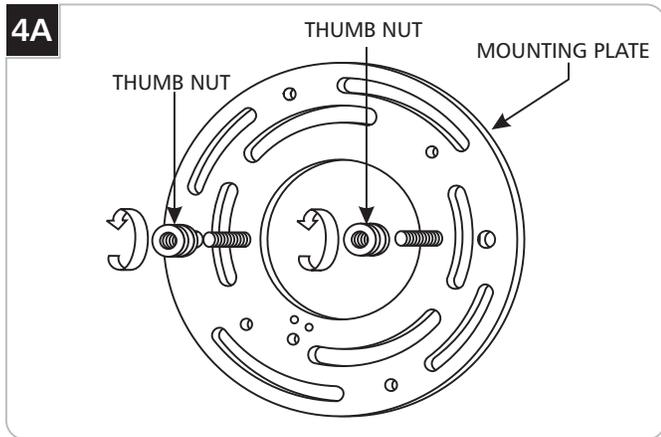

- 1 Unscrew and remove the two thumb nuts from the mounting plate.

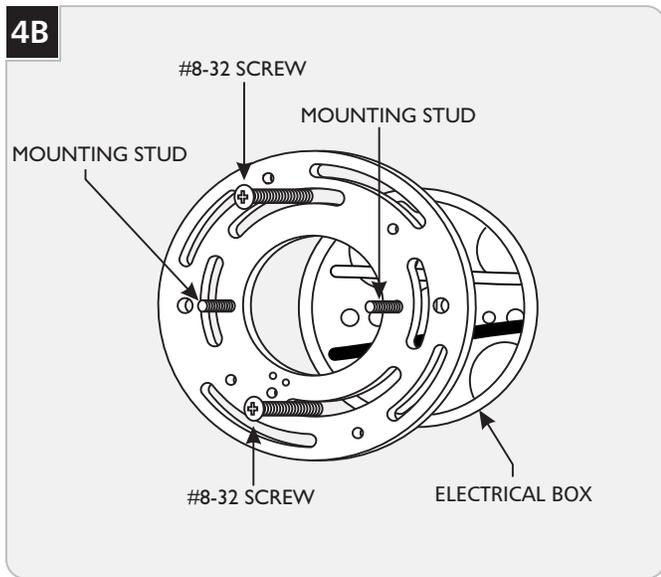


- 2 Align the two mounting studs horizontally and mount the crossbar to the electrical box with the two #8-32 screws provided.

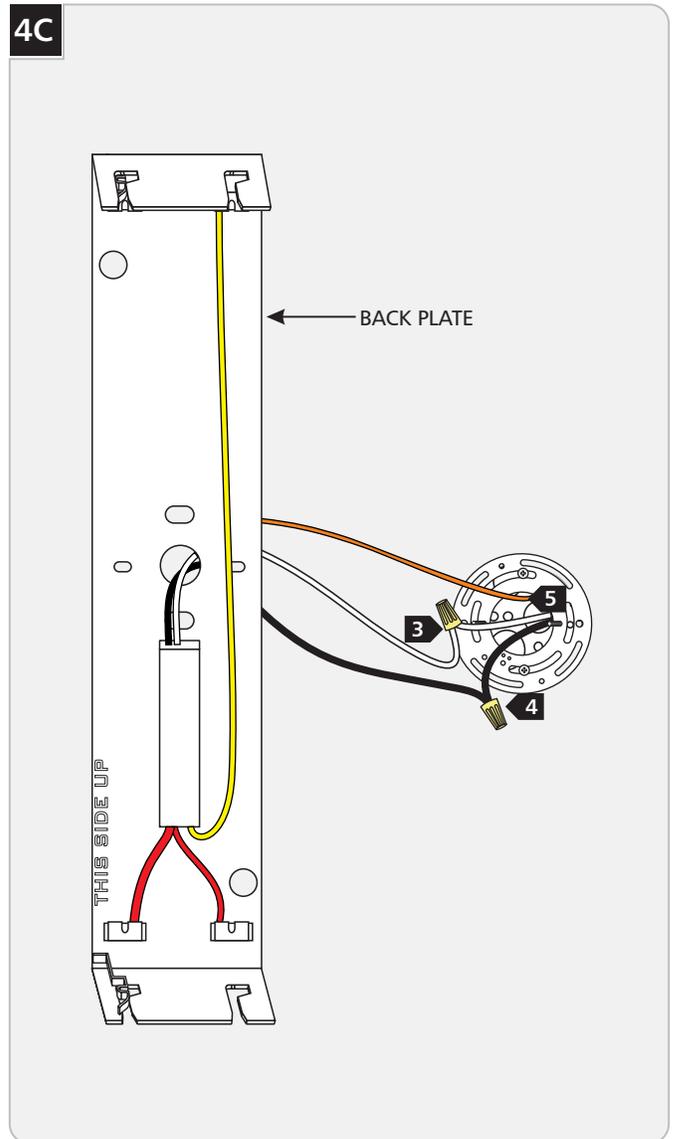

- 3 Connect the white fixture wire to the neutral power line wire with a wire nut.
- 4 Connect the black fixture wire to the hot power line wire with a wire nut.
- 5 Connect the fixture to a suitable ground in accordance local electrical codes.


4D

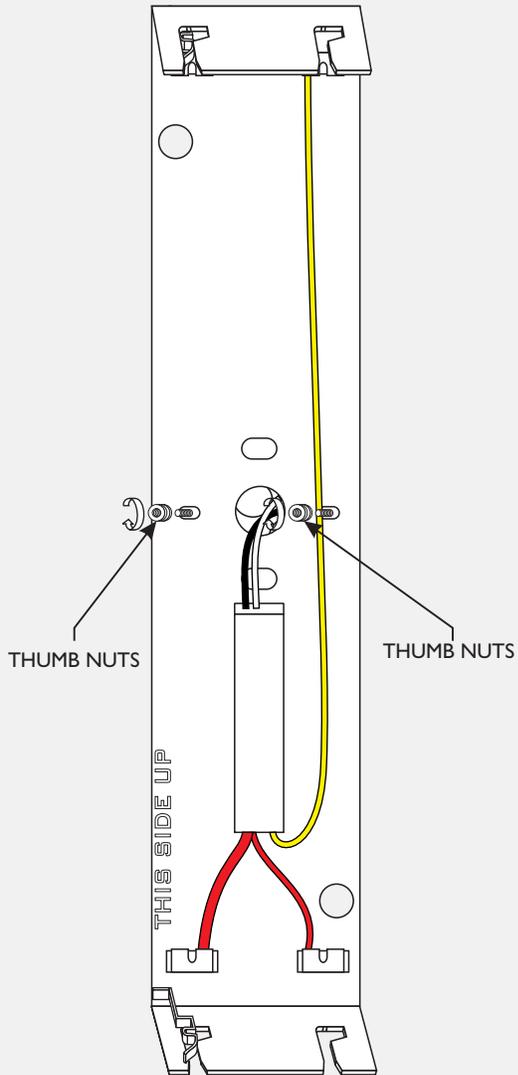

- 6 Properly place all wires and wire nut connections into the electrical box.
- 7 Place the back plate onto the mounting plate and secure it tightly by reinstalling the thumb nuts.


Install the Wall Anchors

5A

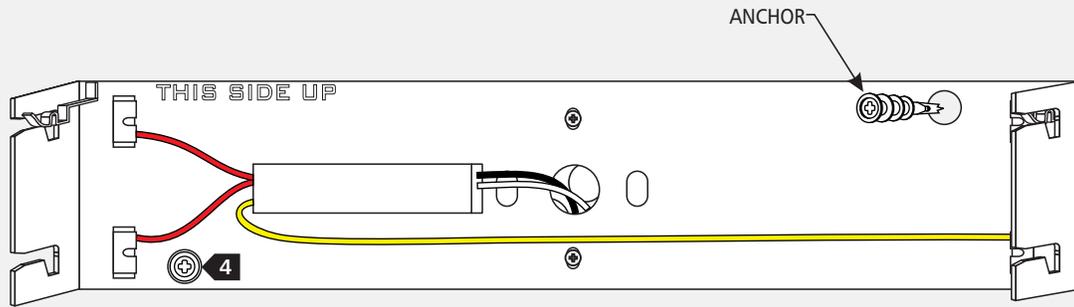

- 1 Verify that the mounting plate is level before continuing.
- 2 Line an anchor tip with the center of an anchor hole, and push the anchor into the wall up to the threads.
- 3 Screw the anchor in the rest of the way with a Phillips-head screwdriver.
- 4 Repeat for the other anchor hole.


5B

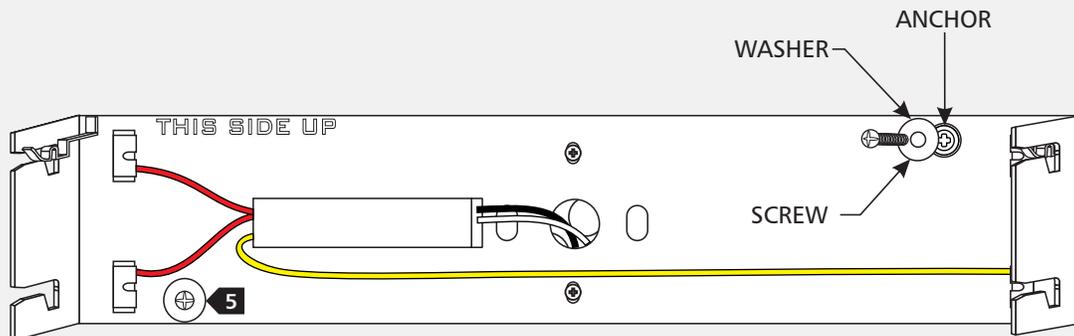

- 5 Slide a #8 screw through a washer, and screw it into an anchor to secure the fixture base to the wall. Repeat for the other anchor.

Install the Lamp and Shade Assembly

6A

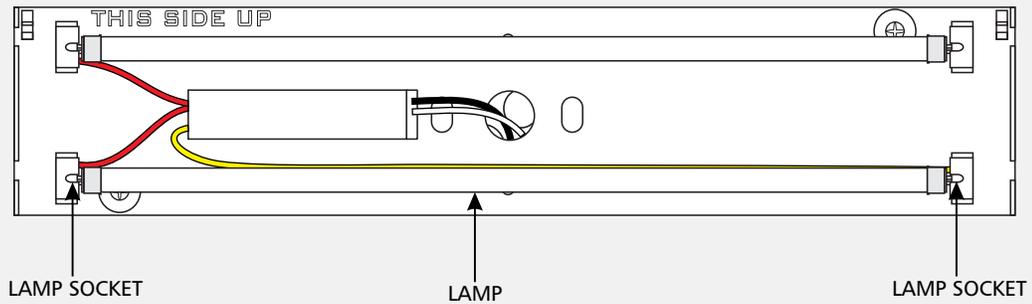


CAUTION: To reduce the risk of a burn or electric shock during relamping, disconnect the power to the fixture.

use **MAX 24 Watt** type T5 high output linear fluorescent lamp.



- 1 Line up the lamp pins into the sockets and rotate the lamps to lock them in place.

6B

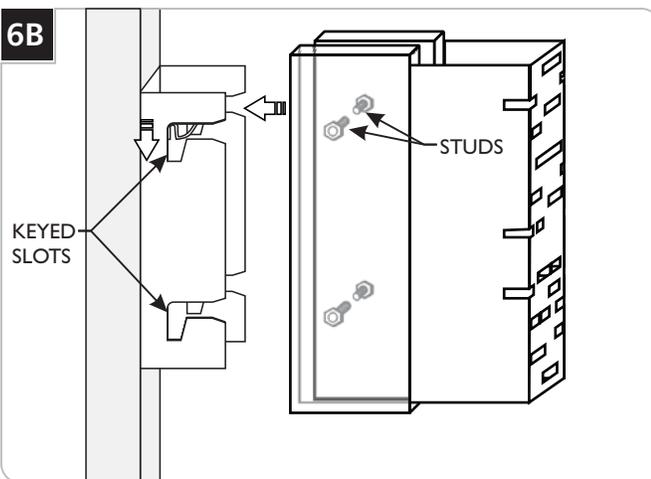

- 2 Line up the studs on the shade assembly to the keyed slots on the back plate.
- 3 Slide the assembly onto the back plate and follow the keyed slot until it is firmly in place.

NOTE: To replace lamp, press the tab on the socket to remove the lamp. Then reverse section 5 to complete re-lamping.

SAVE THESE INSTRUCTIONS!



7400 Linder Ave, Skokie, IL 60077

847.410.4400

www.techlighting.com

© 2012 Tech Lighting, L.L.C. All rights reserved. The "Tech Lighting" graphic is a registered trademark of Tech Lighting, L.L.C. Tech Lighting reserves the right to change specifications for product improvements without notification.

A Generation Brands Company