

# BBL5024


## ASSEMBLY & INSTALLATION GUIDE

**WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.**

**WARNING \*\*\* SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

**INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.**

**ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.**

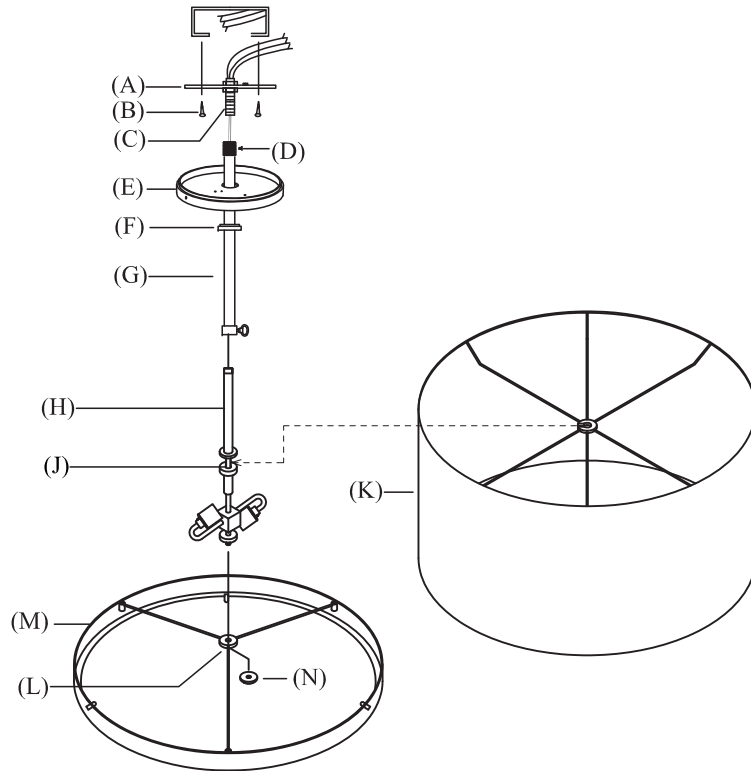

1. Remove cap nut (N) from bottom of candelabra assembly. Attach shade cover (M) to bottom nipple of candelabra assembly (L) and secure with cap nut (N).
2. Slide shade (K) over pole (G), slide shade spider on threaded section under ring (J). And secure by turning ring (J) in clockwise direction.
3. Screw pole (G) onto top nipple of pole (H).
4. Attach mounting strap (A) to mounting outlet box using mounting screws (B).
5. Insert thread nipple (C) in mounting strap (A).
6. Unscrewing the canopy ring (F) and slide the canopy ring and canopy to the pole (F).
7. Loosen set screw (D) and attach pole (F) to threaded nipple and secure with set screw (D).
8. Attach the ground wire (silver or brass in color) from the fixture to the ground junction box wire (usually green or copper wire). Fasten together with a plastic wire connector and wrap the connection with electrical tape. Be sure no wire strands are exposed. It is imperative that the outlet box in your home be properly grounded.
9. Connect the neutral wire from the fixture (ridges molded wire) to the neutral wire from the junction box (usually white). Fasten together with a plastic wire connector and wrap the connection with electrical tape. Be sure no wire strands are exposed.
10. Connect the hot wire from the fixture (smooth wire) to the hot wire (usually black) from the junction box. Fasten each a plastic wire connector and wrap the connection with electrical tape. Be sure that no wire strands are exposed. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.**
11. Tuck the wire connections neatly into the ceiling outlet box.
12. Slip the canopy (C) to the ceiling outlet box.
13. Insert light bulbs into the sockets.
14. Restore power and test fixture. Installation is complete.