

## ASSEMBLY INSTRUCTIONS

## Piedmont Chandelier


Item # CHC1420

**WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.**

**WARNING \*\*\* SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

**INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.**

**ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.**

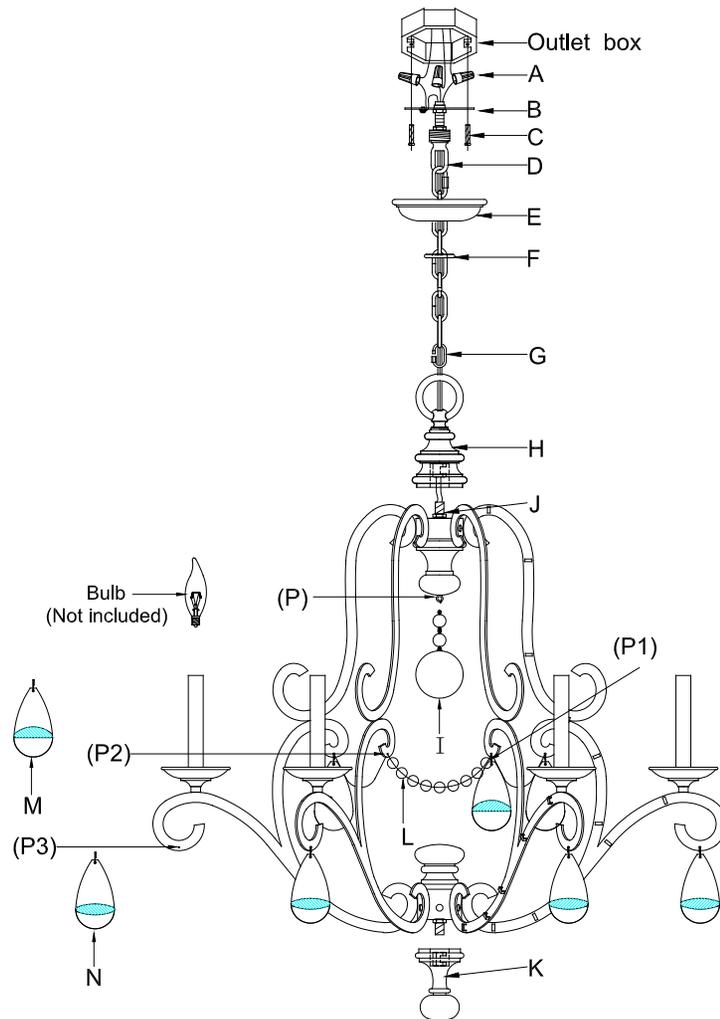

1. Thread the top column (H) onto the nipple of center body (J).
2. Install the crossbar (B) with ceiling loop (D) to outlet box by using mounting screws (C) provided.
3. Thread the lock collar (F) to ceiling loop (D) to secure canopy (E).
4. Using the dimensions of the fixture as a guide, shorten the chain (G) as needed using a pair of chain pliers.
5. Take into consideration that you will use the chain end link to mount the chandelier once you have removed the excess chain.
6. Attach the chain end link to the ceiling loop (D). Carefully lift and hang the fixture assembly to the chain end link.
7. Unwrap the wiring from the top of the fixture assembly, Weave the power supply cord and the ground wire through the chain (G).
8. When you reach the canopy (E) and ceiling loop (D), measure the wires and cut. Be certain to leave enough to connect inside the canopy,
9. Unscrew the threaded collar and slide canopy down on the chain.
10. Twist the power supply and ground wires together and push through the center hole in the ceiling loop, Strip the insulation back on the two power supply wires about 5/8".
11. Identify the hot wire from the fixture by feeling the edges. The hot wire is smooth and has words printed on it. The common wire is ribbed and has no words on it.
12. Attach the bare wire from the fixture to the bare wire from the building using the provided wire nuts (A). If you house has no bare wire (ground) attach this wire to the green grounding screw inside the outlet box.

IT IS IMPERATIVE THAT THIS FIXTURE BE GROUNDED.

# VISUAL COMFORT & Co.



## ASSEMBLY INSTRUCTIONS

## Piedmont Chandelier


Item # CHC1420

**WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.**

**WARNING \*\*\* SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

**INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.**

**ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.**

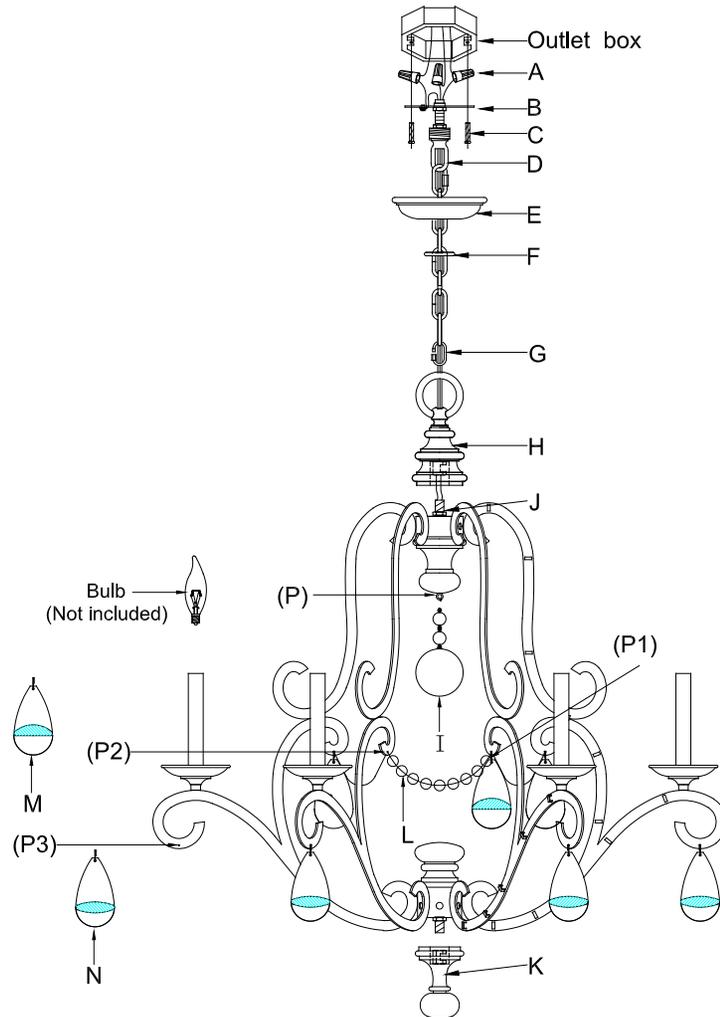

13. Attach the common wire (ribbed, no words) from the fixture to the white wire from the building using the provided wire nut (A).
14. Attach the hot wire (smooth, with words) from the fixture to the black wire from the building with the provided wire nut (A).
15. Secure each connection by tightening and then checking that no wires can be pulled out.  
IT IS IMPERATIVE THAT YOU NOT MIX THESE WIRES.
16. Wrap each connection individually with electrical tape.
17. Neatly tuck the connections into the outlet box.
18. secure the canopy (E) to ceiling loop (D) by collar ring (F).
19. Thread to column (H) to fixture nipple (J), please secure sure you have lock tight it.
20. Thread bottom column (K) onto the hickey on the bottom of center body.
21. Hang glass tear drop (N) to the hole (P3).
22. Attach glass flat tear drop (M) to the hole (P2), Attach glass beads string (L) to the hole (P1) and the hole (P2)
23. Attach glass ball drop (I) to the hole (P).
24. Install light bulbs (not included) Into each socket.
25. Restore power and enjoy your new chandelier.



VISUAL COMFORT & Co.