


# ASSEMBLY INSTRUCTIONS

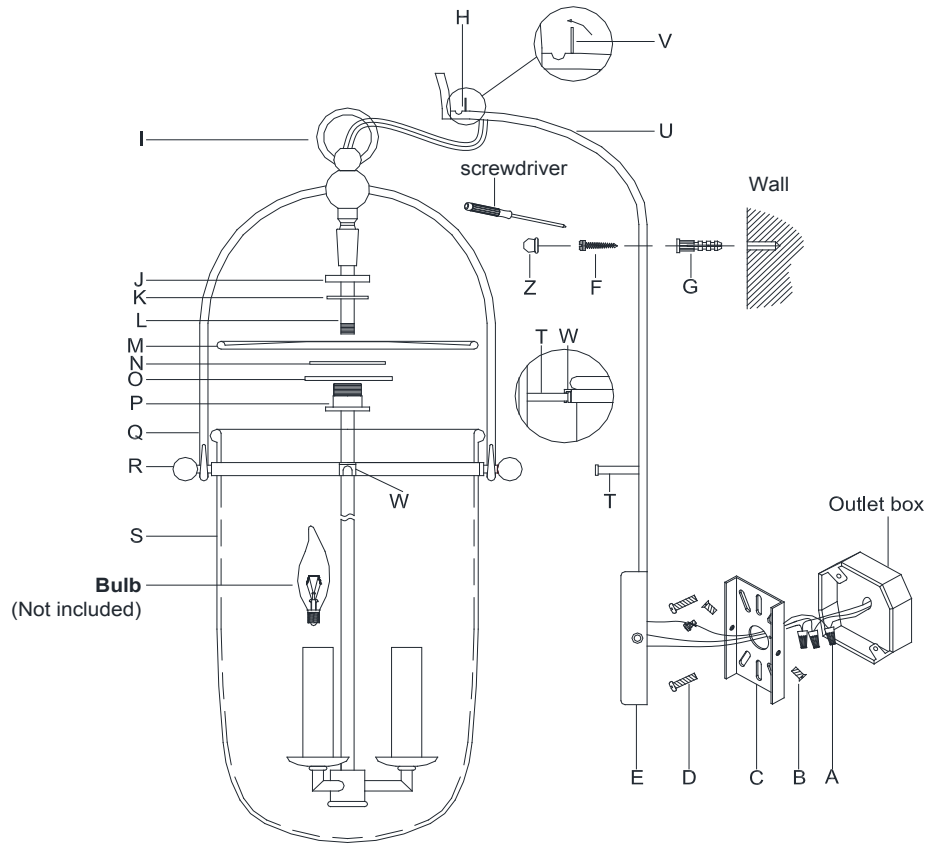

## Lorford Medium Scence

Item # CHD 2270

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

**WARNING\*\*\*SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION. INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.**


ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

**NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING. RETAIN ALL PACKING MATERIAL UNTIL INSPECTION AND INSTALLATION ARE FINAL.**

1. Carefully remove all parts from the box.
2. Let the main wire and ground wire pass through the metal plate (O), plastic washer (N), glass diffuser (M), plastic washer (K), metal ring (J), tube (L) and top ring (I).
3. Attach the metal plate (O), plastic washer (N) on the nipple (P), then attach the glass diffuser (M) on the plastic washer (N) and secure it to the tube (L) with plastic washer (K), metal ring (J).
4. Remove the mounting plate (C) from the backplate (E) by loosening side screws (B).
5. Install the mounting plate (C) to the outlet box and secure with mounting screws (D).
6. Attach the backplate (E) to the outlet box, drill 2 holes on the wall and make sure the hole distance will match to the hole on the backplate (E).
7. Knock the anchors (G) to the wall holes.
8. Hang the top ring (I) to the hook (H) and secure by bending the tab (V). Let the wire pass through the groove on the back of the arm (U).
9. Connect the hot wire (smooth edge, markings) from the fixture to the hot wire from the outlet box (usually BLACK). Fasten them together with a plastic wire connector (A) provided and wrap the connection with electrical tape.
10. Connect the neutral wire (ribbed, no markings) from the fixture to the wire from the outlet box (usually WHITE).  
DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
11. Connect ground wire from the fixture (bare copper) to ground wire from the outlet box (usually green or copper in color).  
IT IS IMPERATIVE THAT THIS FIXTURE BE GROUNDED.



# ASSEMBLY INSTRUCTIONS

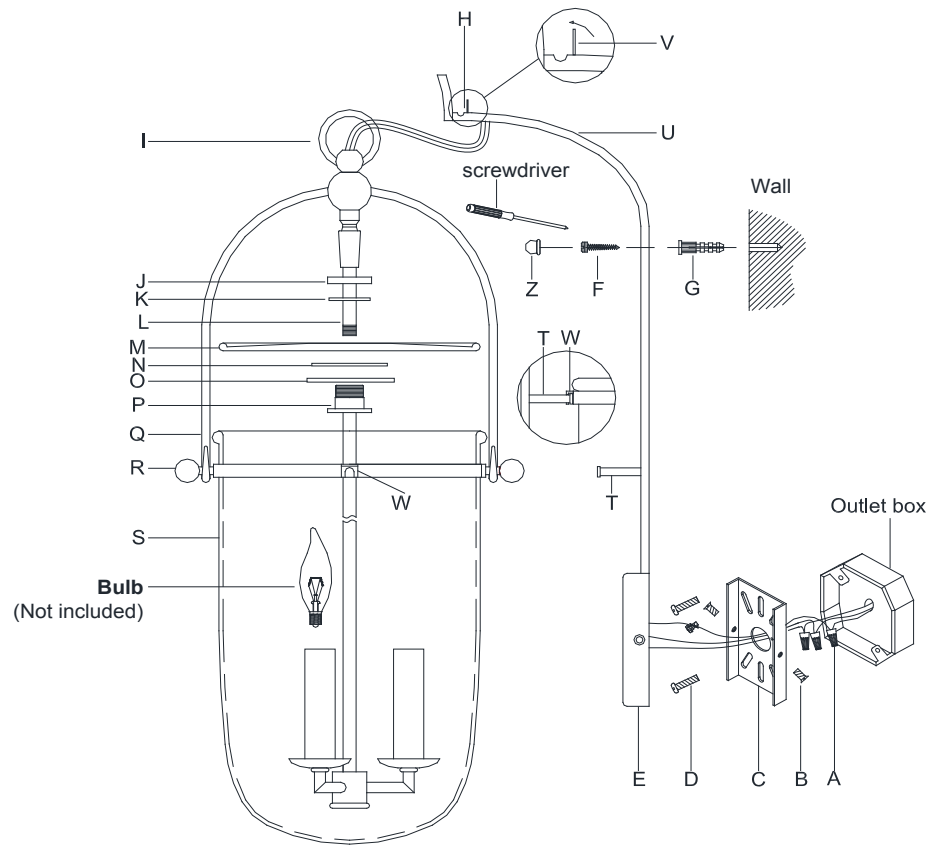

## Lorford Medium Scence

Item # CHD 2270

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

**WARNING\*\*\*SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

**INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.**

**ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.**

**NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING. RETAIN ALL PACKING MATERIAL UNTIL INSPECTION AND INSTALLATION ARE FINAL.**

12. Attach the backplate (E) to the outlet box and secure with side screws (B).
13. Secure the screws (F) into the anchors (G) with using a screwdriver, then thread the nut (Z) to the screws (F).
14. Insert bulbs (not included) into the sockets.
15. Put glass shade (S) into the metal ring (R), turn around the ring (R) and make sure the small hook (W) will be attached to the bar (T). Then hang the metal ring (R) onto the hook (Q).
16. Installation is complete, turn on power at fuse or circuit breaker.

\*\*\*Clean with a dry,soft cloth only.Use no harsh abrasives or chemical agents.

