


ASSEMBLY INSTRUCTIONS

Precision Floor Lamp

Item # KW1060

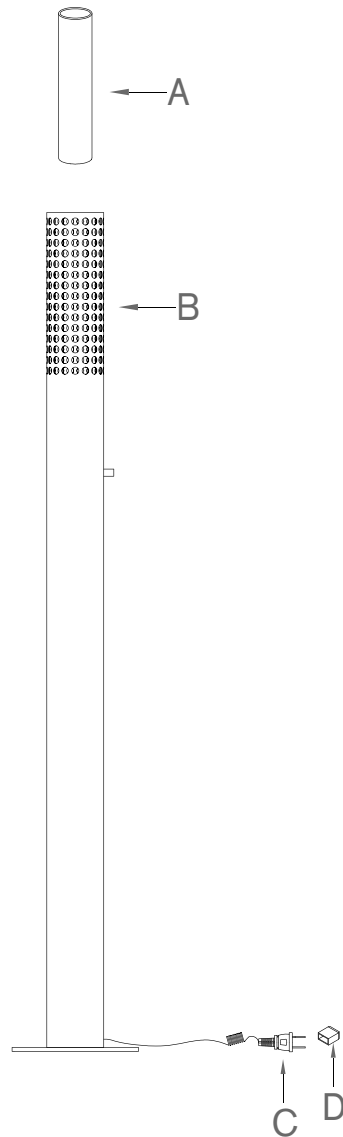

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

1. Carefully remove all parts from the carton.
2. Insert light bulb (not included) Type T, maximum 60 watt into socket.
3. Carefully insert glass cylinder (A) into base of (B).
4. Remove plastic cover (D) from electrical plug (C).
5. Plug lamp into wall outlet.

*** Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.