


RL 5116

ASSEMBLY & INSTALLATION GUIDE

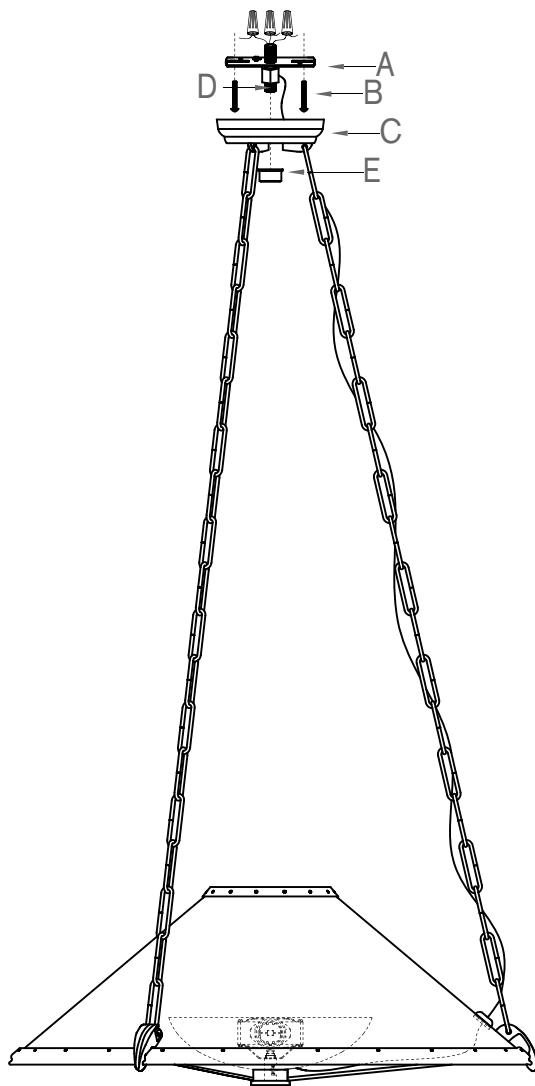

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

1. Carefully remove all parts from the carton.
2. Unscrewing collar (E) from nipple (D) by turning in clockwise direction.
3. Place mounting plate (A) to ceiling outlet box and secure with mounting screws (B)
4. Connect ground wire from the light fixture (bare copper) to ground wire (green or copper in color), fasten together with a plastic wire connector. Tightly wrap the wire from ceiling outlet box with electrical tape, so the end of the connector is sealed. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
5. Connect the hot wires (smooth wires) from the light fixture to the hot junction box wire from ceiling outlet box (usually black). Fasten together with a plastic wire connector provided and tightly wrap wire connector with electrical tape.
6. Repeat the procedure with neutral wires (ribbed wire) from the light fixture to the wire from ceiling outlet box (usually white). DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.
7. Attach canopy (C) to the affixed mounting plate (A), letting the nipple pass through the center hole of canopy (C) and secure with collar (E). Tighten by hand.
8. Insert light bulbs (not included) Type B TORPEDO, maximum 40 watt into sockets.
9. Installation is complete. Restore power and test fixture.

*** Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.