


## ASSEMBLY INSTRUCTIONS

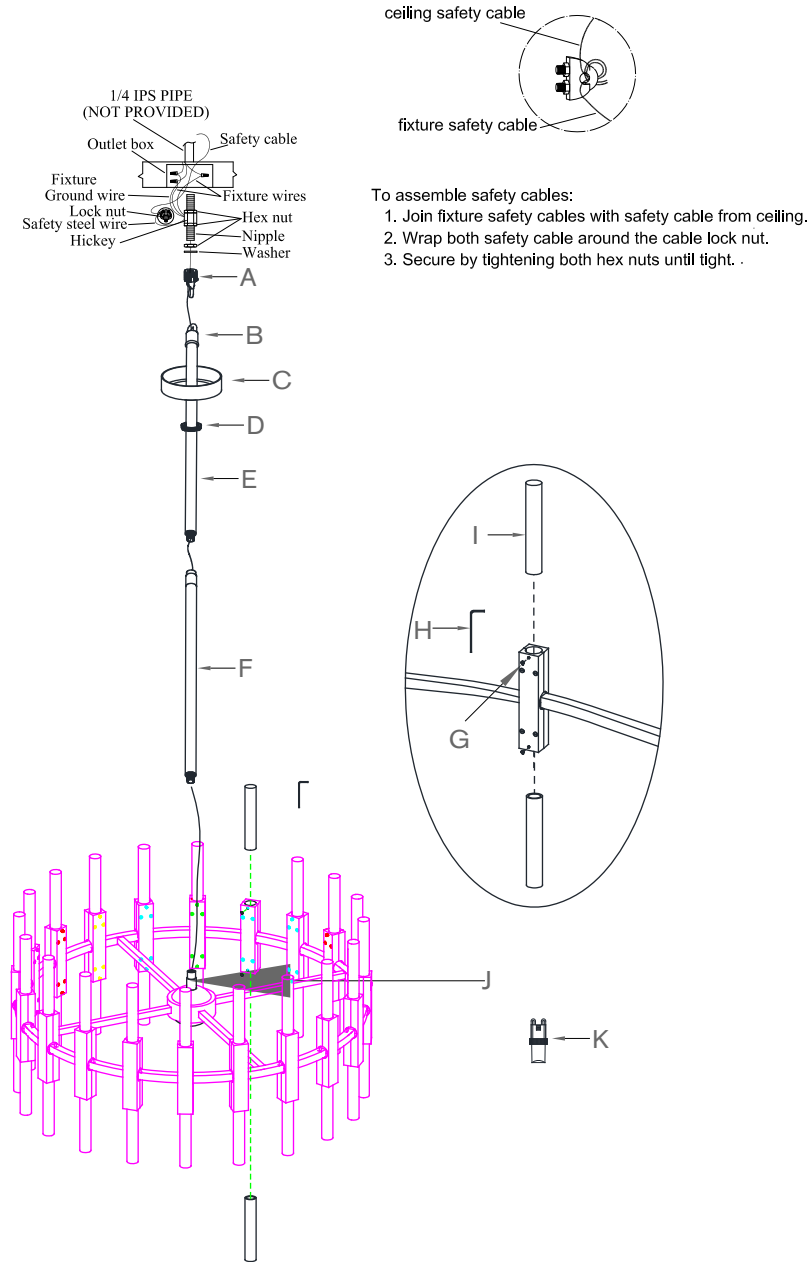

## Palomar Small Rotating Chandelier Item # S 5143

**WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.**

**WARNING \*\*\* SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

**INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.**

**ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.**

1. Carefully remove all parts from the carton.
2. Provide a 1/4" IPS pipe with one end securely mounted to beam or a structural. The other end should protrude through the enter of the outlet box as shown.
3. Feed wires through all of the hang rods (F) , (E) and mounting loop (A).
4. Thread the nipple of rod (F) into the joint (J) by turning clockwise direction until tight.
5. Thread the nipple of rod (E) into the opening of rod (F) by turning clockwise direction until tight.
6. Attach hanging loop (B) to mounting loop (A) by opening/closing end link of chain.
7. Unscrew canopy ring (D), slide canopy ring (D) and canopy (C) on connection rod (E).
8. Insert top threaded nipple in mounting 1/4 IPS pipe.
9. Lace the fixture wires, ground wires and safety cable through the mounting loop (A), exiting through the side of hickey. Run the safety cable through the top of the outlet box and secure to structural member.
10. Attach the bare copper ground wire from the fixture to the ground junction box wire (usually green or copper), fasten together with a plastic wire connector. Tightly wrap the wire connector with electrical tape. Be sure no wire strands are exposed. **IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.**
11. Connect neutral wire from fixture (ribbed molded wire) to the neutral wire from the junction box (usually white) . Fasten both wires together with a plastic wire connector and tightly wrap the wire connector with electrical tape. Be sure no wire strands are exposed.
12. Connect the hot wires from the fixture (smooth wire) to the hot wire (usually black ) from the junction box. Fasten both wires together with a plastic wire connector and wrap the connection with electrical tape. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.**
13. Tuck the wire connections neatly into the ceiling outlet box.
14. Slip canopy (C) to ceiling and secure with canopy ring (D).
15. Insert light bulbs (K) into sockets.
16. Loosen set screws (G), insert acrylics (I) into the top and bottom holes on light fixture, secure by tighten set screws (G).
17. Restore power and test fixture. Installation is complete.

\*\*\* Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.