

TOB 5017


ASSEMBLY & INSTALLATION GUIDE

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING * SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

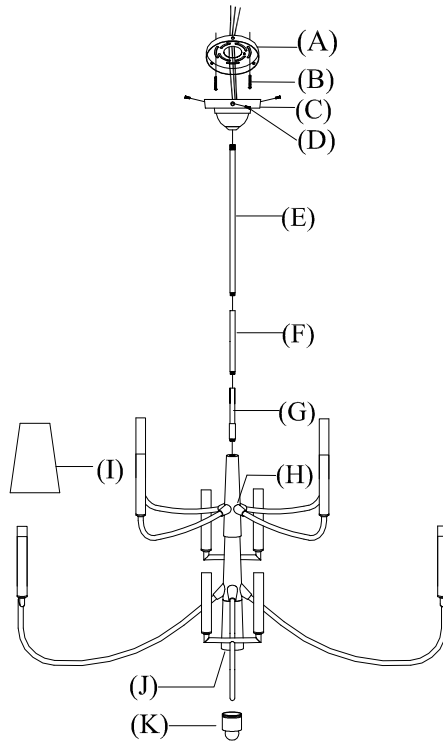

1. Thread connection pole (G) into top threaded opening of part (H).
2. Thread connection pole (F) into pole (G) and pole (E) into pole (F).
3. Thread pole (E) into threaded opening of canopy (C).
4. Remove back plate (A) from canopy (C) by removing canopy screws (D).
5. Gently pull the wires from the ceiling and allow the wires to hang. Thread the wires through the center hole in back plate (A).
6. Attach back plate (A) to ceiling outlet box and secure with mounting screws (B).
7. Attach ground (silver or copper in color) wire to ground wire from wall outlet box (usually green or copper in color), fasten together with a plastic wire connector. Tightly wrap the wire connector with electrical tape so the end of the connector is sealed.

IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.

8. Connect neutral (Ribbed) fixture wire coming from fixture base to neutral (usually white) outlet wire. Fasten both wires together with a plastic wire connector and tightly wrap the wire connector with electrical tape.
9. Repeat the procedure with the hot (Round) wire. Always make sure that no wire strands are left outside the connectors.

DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.

10. Attach canopy (C) to affixed back plate (A), by aligning the holes and inserting canopy screws (D).
11. Thread finial (K) into the bottom opening of fixture body (J).
12. Insert light bulbs into sockets.
13. Clip lamp shades (I) onto light bulbs.