


# TOB5135

## ASSEMBLY & INSTALLATION GUIDE

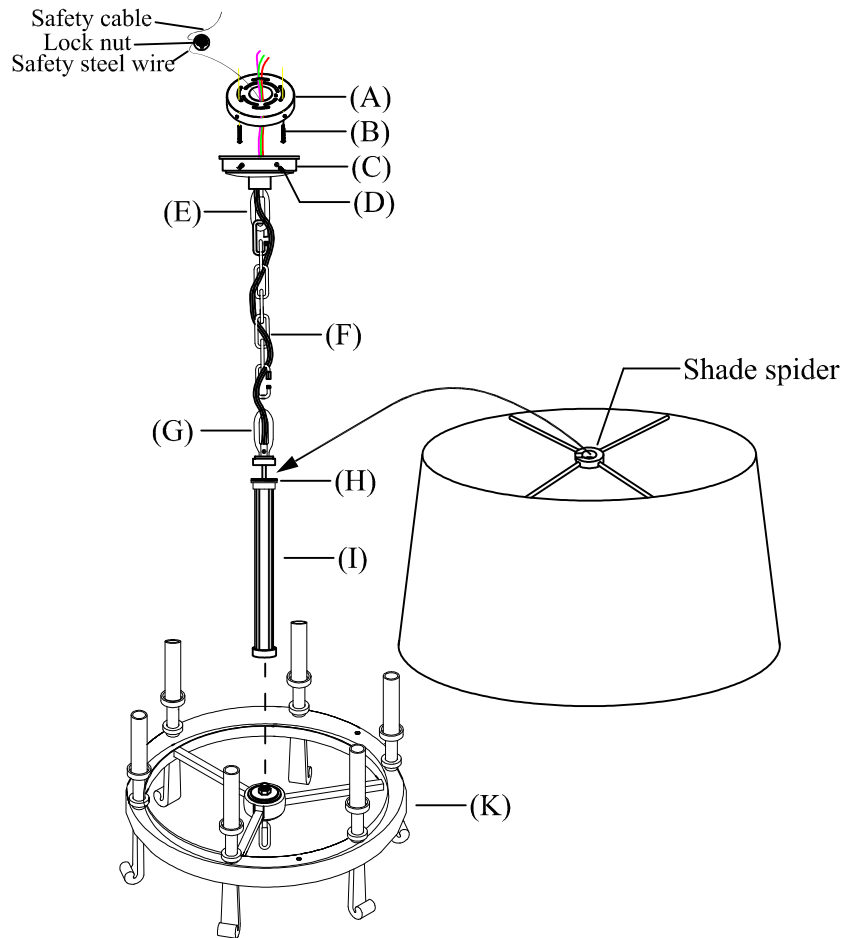

**WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.**

**WARNING \*\*\* SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

**INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.**

**ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.**

1. Screw pole (I) onto top nipple of fixture body (K).
2. Attach chain (F) to top loop (G) by using side cut link provided.
3. Attach the other side cut link to the loop (E) at bottom of canopy base (C).
4. Feed wire through chain (F) and canopy base (C).
5. Connect the safety steel wire from the fixture to the safety cable from ceiling with lock nut as show in illustration A.
6. Attach ground (silver or copper in color) wire to ground wire from wall outlet box (usually green or copper in color), fasten together with a plastic wire connector. Tightly wrap the wire connector with electrical tape so the end of the connector is sealed.

IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.

7. Connect neutral (Ribbed) fixture wire coming from fixture base to neutral (usually white) outlet wire. Fasten both wires together with a plastic wire connector and tightly wrap the wire connector with electrical tape.
8. Repeat the procedure with the hot (Round) wire. Always make sure that no wire strands are left outside the connectors.

DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.

9. Remove back plate (A) from canopy base (C) by unscrewing base screws (D).
10. Attach back plate (A) to ceiling outlet box and secure with mounting screws (B).
11. Attach canopy base (C) to affixed back plate (A) and secure with base screws (D).
12. Attach side opening of shade spider to threaded rod and secure with ring (H).
13. Insert light bulbs into sockets.