


## ASSEMBLY INSTRUCTIONS

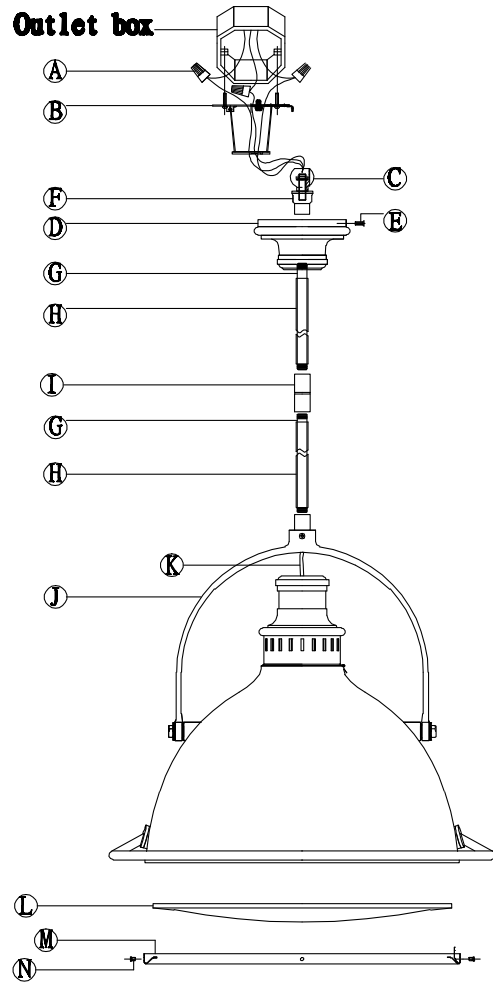

## Patrick Large Pendant

Item # TOB5262

**WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.**

**WARNING \*\*\* SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

**INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.**

**ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.**

1. Thread the two pipes (H) into the coupling (I)
2. Twist lock the bottom pipe (H) to the U bracket (J)
3. Insert the hanging ball (C) into the hanging coupling (F), and tighten
4. Place the pipe (H) through the canopy (D)
5. Twist lock the hanging ball (C) and coupling (F) into the top pipe (G)
6. Install the crossbar (B) to outlet box by using mounting screws provided.
7. Raise up the fixture carefully, hang the hanging ball, keep about 7" extra length wires (K) inside the shade house.
8. Unwrap the wires from the top of the fixture assembly
9. Strip the insulation back on the two power supply wires about 5/8"
10. Attach the bare wire from the fixture to the bare wire from the building using the provided wire nut (A). If the house has no bare wire (ground) attach this wire to the green grounding screw inside the outlet box.  
IT IS IMPERATIVE THAT THIS FIXTURE BE PROPERLY GROUNDED.
11. Attach the common wire (ribbed, no words) from the fixture to the white wire from the building using the provided wire nut (A).
12. Attach the hot wire (smooth, with words) from the fixture to the black wire from the building, with the provided wire nut (A).
13. Secure each connection by tightening and then checking that no wires can be pulled out.  
IT IS IMPERATIVE THAT YOU NOT MIX THESE WIRES. DO NOT MIX THESE WIRES OR SAFETY WILL BE COMPROMISED.
14. Wrap each connection individually with electrical tape & neatly tuck the connections into the outlet box.



VISUAL COMFORT & Co. Est. 1987

## ASSEMBLY INSTRUCTIONS

### Patrick Large Pendant


Item # TOB5262

**WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.**

**WARNING \*\*\* SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

**INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.**

**ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.**

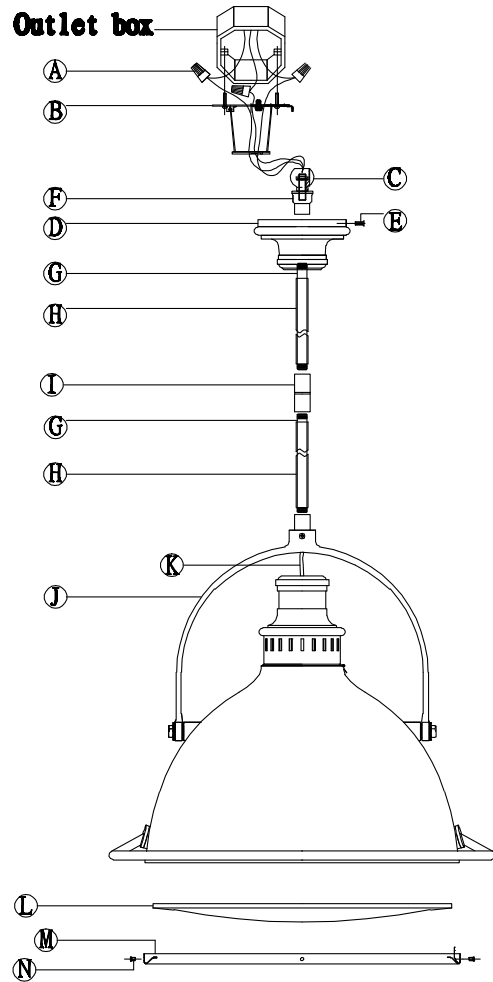

15. Install the canopy (D) and secure with the fixing screws (E)

16. Install light bulb (not included) into the socket

17. Place the glass (L) into the glass ring (M), clip the glass tight

18. Install the glass ring (M) to the shade with the provided fixing screws (N)

19. Restore power and test your fixture.

