


ASSEMBLY INSTRUCTIONS

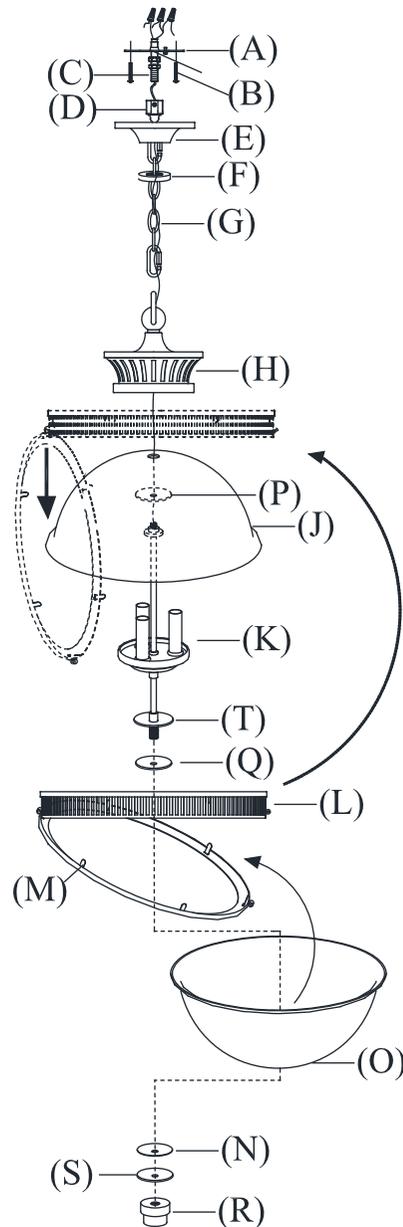

Globe Pendant Item # CHC 2128

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING * SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

1. Carefully remove all parts from the carton.
2. Join (H), (J), (P) and (K) together, letting the top nipple of (K) pass through the hole of the washer (P) and shade (J) and hand tighten (K) to (H).
3. Open the lip ring at bottom of ring (L) by loosen the lock pin, carefully slide the ring (L) onto the glass shade (J), make sure metal tabs inside of (L) are flipped against the shade (J), and secure the glass shade (J) to ring (L) by bending back the metal tabs towards the lip of the glass shade (J).
4. Install glass shade (O) to the lip ring, make sure the metal tabs (M) are flipped against the glass shade (O) and secure by bending back the metal tabs (M) toward the lip of the glass shade (O).
5. Insert light bulbs into the sockets.
6. Close the glass shade (O) with the lip ring assembled to the center ring (L), letting the threaded end of the center pipe with washer (O) pass through the center of glass shade (O).
7. Hand rotate the washer (T) to move it up or down until it fits to the inside of the glass shade (O), secure the glass shade (O) using lock pin on the center ring (L).
8. Slide washer (N), metal plate (S) onto the threaded end of (K) and secure with finial (R).
9. Attach chain (G) to top loop (H) on light fixture.
10. Feed wire through chain (G) and chain mounting loop (D).
11. Slide canopy (E) and canopy ring (F) on chain (G).
12. Attach mounting strap (A) to ceiling outlet box and secure with mounting screws (B).
13. Insert top thread nipple (C) in mounting strap (A).
14. Attach chain mounting loop (D) to thread nipple (C).
15. Attach chain (G) with fixture to chain mounting loop (D) at desired height.
16. Attach the ground wire (bare wire) from the fixture to the ground junction box wire (usually green or copper wire). Fasten together with a plastic wire connector and wrap the connection with electrical tape. Be sure no wire strands are exposed.
17. Connect the neutral wire from the fixture (ridges molded wire) to the neutral wire from the junctionbox (usually white). Fasten together with a plastic wire connector and wrap the connection with electrical tape. Be sure no wire strands are exposed.
18. Connect the hot wire from the fixture (smooth wire) to the hot wire (usually black) from the junction box. Fasten each together with a plastic wire connector and wrap the connection with electrical type. Be sure that no wire strands are exposed. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.**
19. Tuck the wire connections neatly into the ceiling outlet box.
20. Slip canopy (E) to ceiling and secure with threaded canopy ring (F).
21. Restore power and test fixture. Installation is complete.

*** Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.